### LAMP



# HES INSTALLATION MANUAL FOR HES3D-E190 CONCEALED HINGE


Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

### **ABOUT THE PRODUCT**

- This product is a concealed hinge for indoor use to be recessed in the cut out on door and doorframe.
- 3 way adjustment function allows vertical, horizontal, and depth adjustment.
- UL certified No.R38588

### **DOOR SPECIFICATION**

Min. Door thickness	38 mm
Max. Door weight	100 kg per 2 hinges, 125 kg per 3 hinges
Max. Door size	Width: 900 mm, Height: 2400 mm

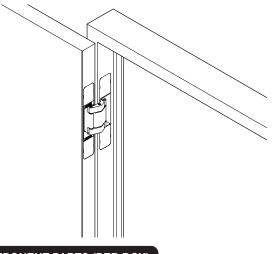

### **COMPONENT PARTS (PER BOX)**

Concealed hinge

2 pcs

· Screw cover

4 pcs x 2 bags

Template

1 pc

Countersunk head tapping screw 5x30

8 pcs x 2 bags

· Hex Key 4mm

1 pc

### FOR YOUR SAFE WORK AND CORRECT INSTALLATION

### Meaning of symbols





Prohibited



Required


### Caution: If these cautions are not followed, it may result in injury or damage.

- It is necessary to manufacture the frame with sufficient strength so it endures the weight of the door and impact shocks upon opening/closing the door. Also make sure to only use the designated screws and to fasten them firmly. A cabinet with poor strength or loose screws might result the door to be dropped down and cause injury.
- Opo not try to use this product for any other purposes other than originally intended for. Do not use the parts for applications that are out of specification.
- Use in conjunction with a door closer is not recommended. For soft-close option, we recommend Sugatsune LDD-V or LDD-S door damper.
- Make sure to follow the designated measurements and specifications as well as horizontal and verticals angles. Make sure that the frame is not warped, since it may affect the movement of the door.
- This product is a part for architectural fittings. After installation, make sure to test the finished product thoroughly to ensure that it is well-functioning and safe.
- Make sure to test the screws for slack at regular intervals (one month from first usage, half year and then one time every year is recommended).

### INSTALLATION DRAWING (EXAMPLE)

#### Caution Round edges of door and frame by applying cuts with "C1 and over" or "R1 and over." (Reference to " \* " in the drawing.) Reference Reference surface of door surface of doorframe Reference surface of doorframe Maximum 6.5 mm Door Door 28 3 180 Maximum -32 4 mm Reference Door surface of door,

### **CUT OUT DRAWING FOR DOOR AND DOORFRAME**

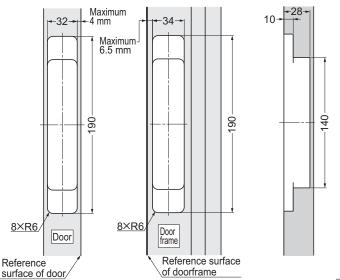





# 1 Disassembly of Hinge

# Screw cover Screw cover Vertical adjustment screw Vertical Loosen this screw adjustment screw to disassemble Main body Base frame

# 3 Hanging Door

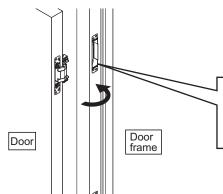


# 2 Installing Hinge to Door and Cabinet

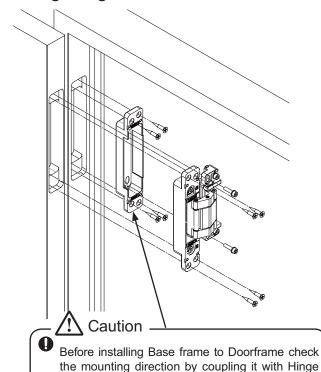

While holding the door, insert Hinge main body into the Base frame on Doorframe. Keep holding the door and fix the hinge with the fixing screws at once.

main body.

## ADJUSTING DOOR POSITION

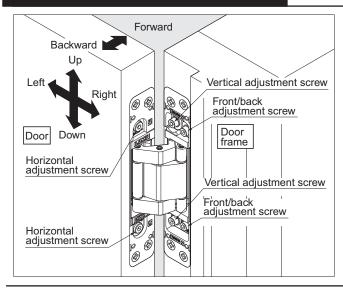

- · When adjusting Vertical or Backward/Forward position, loosen the screws 360-degree, then hold the door at the suitable position and re-tighten the screws. Use wedges to support the door. (Tightening torque is 4.9 N·m.)
- · When adjusting horizontal position, turn Horizontal adjustment screw. (There are two screws per hinge.)

The gap between Door and Frame will be expanded by turning the screw to the right.



E-mail:lamp@sugatsune.com.cn

E-mail:lamp@sugatsune.com.cn

### Caution

O Do not remove Front/back adjustment screw. The door may be dropped and cause injury.

When adjusting horizontal position, turn both screws little by little, same amount. The hinge may be broken if you keep turning one screw only.

Horizontal adjustment range is +3 mm/-2 mm. When turning the screw to the right, if you move the part more than 2 mm, the cover cannot be put on, since the part protrudes. If you still turn the screw, the door will be dropped.

### SUGATSUNE KOGYO CO.,LTD

Shanghai, CHINA Phone: +86 21 3632 1858

### SUGATSUNE KOGYO (UK) LTD

### SUGATSUNE EUROPE GmbH

Düsseldorf, GERMANY
Phone: +49 211 53812900 E-mail:sales@sugatsune.eu

Phone: +86 20 6639 3552

### SUGATSUNE KOGYO INDIA PRIVATE LIMITED

Mumbai, INDIA
Phone: +91 22 28314490/91 E-mail:sales@sugatsune.in

SUGATSUNE SHANGHAI Co., LTD

Guangzhou, CHINA

### SUGATSUNE AMERICA, INC

California, USA
Phone: +1 310 329 6373 E-mail:sales@sugatsune.com

### Chicago, USA

Phone: +1 312 461 1081 E-mail:chicagoshowroom@sugatsune.com.

### SUGATSUNE CANADA. INC.

Phone: +1 514 312 5267 E-mail:support@sugatsune.ca