# LAMP. Design push knob DPL-RO/DPL-OV/DPL-SQ Installation manual


Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation. Please keep this manual at hand for future reference.

## Parts list

- Knob body: 1
- · Latch body: 1
- · Counter plate: 1
- · Screws "A" for push knob and latch body assembly (cross recessed binding head tapping screw 4x20): 2
- Screws "B" for counter plate and latch body installation (cross recessed pan head tapping screw 3x14): 5
- Installation manual: 1 (this manual)

## Applicable door thickness

15 mm - 25 mm

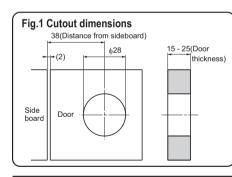

#### SUGATSUNE KOGYO CO..LTD Tokvo, JAPAN

Phone: +81 (0)3 3866 2260 E-mail:export@sugatsune.co.jp


#### SUGATSUNE KOGYO (UK) LTD Reading, UK

Phone: +44 118 9272 955 E-mail:sales@sugatsune.co.uk

#### SUGATSUNE EUROPE GmbH Düsseldorf, GERMANY

Mumbai, INDIA E-mail:sales@sugatsune.eu Phone: +91 22 28314490/91 E-mail:sales@sugatsune.in Phone: +49 211 53812900 ISO9001(Japan Offices and Sugatsune America) and ISO14001(Chiba Production division and Logistics center), certified.

## Fig.2 Installation drawing

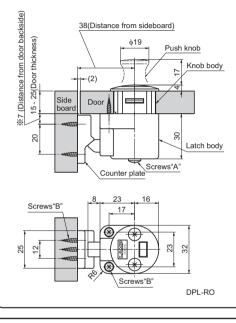

#### Installation procedure

- Drill a \u00e928mm hole in the door. (See FIG. 1, FIG. 2) Insert the knob body into the hole from the front of the door. Match the position of the latch body to that of the knob body at the back of the door and assemble using the 2 screws "A". Fix the latch body to the door by using 2 screws "B".
  - Tighten assembly screws "A" enough to have a secured assembly.
  - Do not over tighten assemble screws "A" as it may damage the latch body.
  - Do not use any assembly screws other than the provided screws "A" as it may damage the latch body.
- Attach the counter plate in the designated position (Fig.2) on the sideboard, using 3 screws "B".

Note: In FIG. 2, dimensions marked by \* are lengths from the backside of the door, regardless whether it is an inset door and overlav application

- Never close the door with the push knob in the pushed (closed) position as it may break the latch.
- Attempting to disassemble this product as you may result in iniurv.

#### SUGATSUNE AMERICA, INC California, USA

Phone: +1 310 329 6373 E-mail:sales@sugatsune.com

#### Chicago, USA

Phone: +1 312 461 1081 E-mail:chicagoshowroom@sugatsune.com.

### SUGATSUNE CANADA, INC.

Phone: +1 514 312 5267 E-mail:support@sugatsune.ca

#### 2017.09 1171-1

Shanghai, CHINA Phone: +86 21 3632 1858 E-mail:lamp@sugatsune.com.cn

SUGATSUNE SHANGHAI Co., LTD

#### Guangzhou, CHINA Phone: +86 20 6639 3552

E-mail:lamp@sugatsune.com.cn

## SUGATSUNE KOGYO INDIA PRIVATE LIMITED