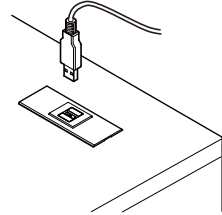# LAMP®
DMF1-B BRACKET FOR DMF1 AND DMFH1 INSTALLATION MANUAL

Thank you for selecting our product. Before starting installation,
please read this manual thoroughly to ensure correct installation.
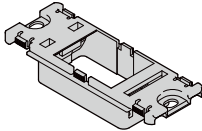Please keep this manual at hand for future reference.

ABOUT THE PRODUCT

● Mounting bracket for DMF1 and DMFH1.

● Various connectors such as LAN connector, USB connector,
and LAN cable case can be assembled.

Cover is not included.

SPECIFICATIONS

■ Screw

Wood mounted : Binding head tapping screw 4×16···2 pcs (Included)
Metal mounted : Binding screw M4, Nut M4,and
Plain washers Nominal Size4 (Not included)
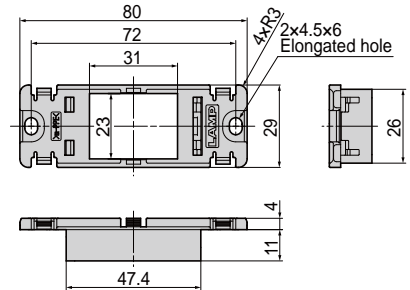
Item Code	Item name	Number of slots
210-040-776	DMF1-B	1

80
72
31
23
29
4×R3
2×4.5×6
Elongated hole
26
4
11
47.4

PRECAUTIONS FOR SAFETY

Precautions for installation

⚠ **Caution** If not followed injury or damage may result.

❗ It is necessary to mount the product on the place
which can hold the weight of the installed parts and
can bear the operating force of connectors.
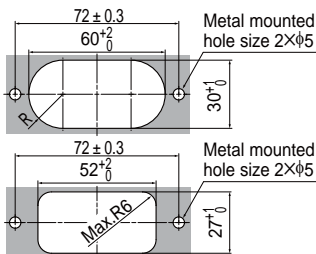
Precautions for use

⚠ **Caution** If not followed injury or damage may result.

🚫 Do not paint the product to avoid damage.
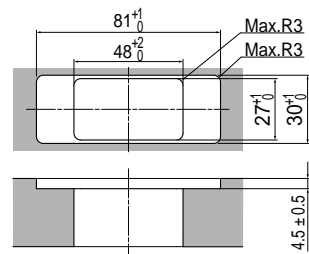
INSTALLATION
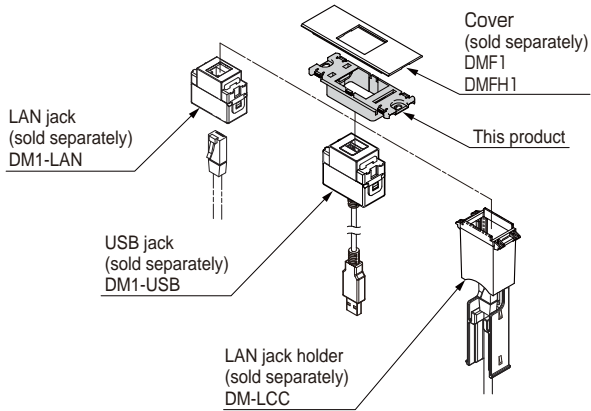
1 Drilling dimensions

Surface mounted
For DMF1

72 ± 0.3
60 +2 0
Metal mounted
hole size 2×φ5
30 +1 0
R

72 ± 0.3
52 +2 0
Metal mounted
hole size 2×φ5
Max.R6
27 +1 0

Recessed mounted
For DMFH1

81 +1 0
48 +2 0
Max.R3
Max.R3
27 +1 0
30 +1 0
4.5 ± 0.5

2 Assembly

【1】

LAN jack
(sold separately)
DM1-LAN

USB jack
(sold separately)
DM1-USB

LAN jack holder
(sold separately)
DM-LCC

Cover
(sold separately)
DMF1
DMFH1

This product

【2】 Hook the jack onto the lip of the bracket and push until a click sound is heard.

LAMP logo

This product Lip LAMP logo
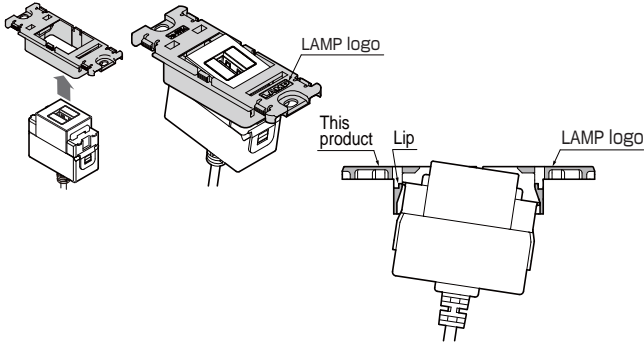
Removal of jack

Insert a flat-head screwdriver into the gap for removal, then pry the bracket lip to remove the jack.
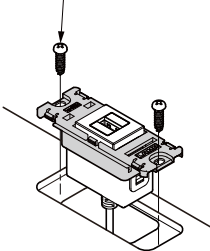
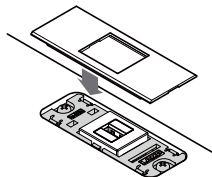LAMP logo
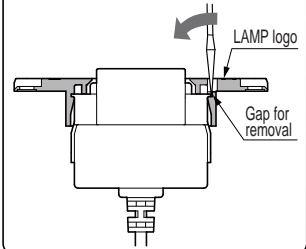
Gap for removal

【3】 Mounting.
(For recessed mounted models)

Provided screws

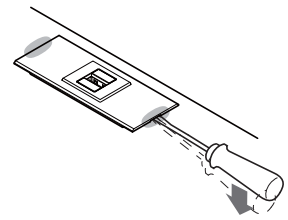Metal mounted: (screws not included) refer to the Screw section on page 1.

【4】 Push the cover in until a click sound is heard, Leave no gap between the cover and table top.

Removal of cover

Insert a flat-head screwdriver into either of the gaps (⬤) between the cover and tabletop. Pry to remove the cover.