

LAMP. フリースライドロック FSL型 取付説明書


このたびは、弊社製品をご採用いただきありがとうございます。取付作業前に本書をよくお読みのうえ、正しく取り付けてください。取付後は、本書をいつでも取り出せるよう保管してください。

本製品について


- モニター等をアルミフレームの任意の位置に保持させる金具です。
- 操作レバーの誤作動を防止するカバーが付いています。
- ロック機構は下方向にだけ働きます。

仕様

【取付可能なアルミフレーム】

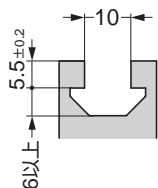

許容垂直荷重 N (kgf)	117(12)
許容モーメント荷重 N·m	20

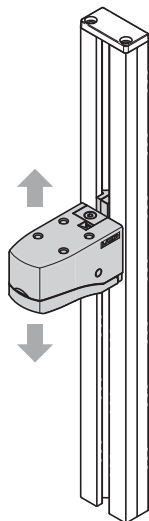

正しく安全に取り付け・使用していただくために

図記号の意味



注意 軽傷を負うことや、物的損害が発生するおそれがある内容を示します。

- ❗ 本製品は必ず、縦方向のアルミフレームに取付けてください。
- ⚠ 本製品は1ヶ使いを推奨しています。2ヶ使いは自己責任で使用願います。
- 🚫 本書に示す仕様以外の取付けはしないでください。
- ❗ 位置を動かさないときは安全のため、カバーを閉じてください。
- ⚠ 本体とレールの摺動部に油分が付着すると機能が低下します。

LAMP. ADJUSTABLE MOUNT FSL INSTALLATION MANUAL


Thank you for selecting our product. Before starting installation, please read this manual thoroughly to ensure correct installation.

ABOUT THE PRODUCT


- Vertically adjustable aluminum frame mount for a monitor.
- Cover to prevent unexpected operation.
- The adjustable mount only prevents downward motion.

SPECIFICATIONS

【Suitable aluminum frame】

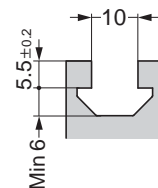

Max. Vertical Load N(kgf)	117(12)
Max. Moment N·m	20

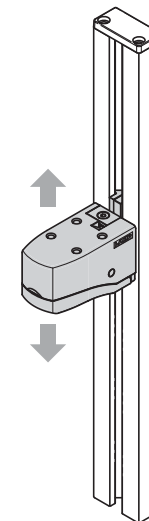

FOR YOUR SAFE WORK AND CORRECT INSTALLATION


Meaning of symbols



Caution If not followed injury or damage may result.



- ❗ Be sure to mount the product on a vertical frame.
- ⚠ This product is designed for one item per mount. Using multiple mounts for a single item is not recommended.
- 🚫 Do not use the product for applications that are not specified
- ❗ Close the cover after adjusting.
- ⚠ If there is oil on the groove of the frame, load capacity will be reduced.

寸法図 DIMENSIONS

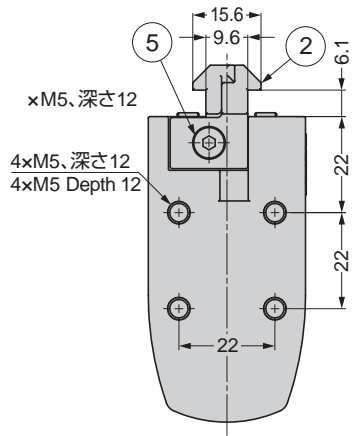

No.	部品名 (Part name)
①	本体 (Body)
②	ガイドピース (Guide piece)
③	レバー (Lever)
④	カバー (Cover)
⑤	低頭六角穴付きボルトM4×10 Low head hexagonal socket head bolt M4×10

付属品: 六角レンチ 呼び3
Hex key (3mm) is provided.

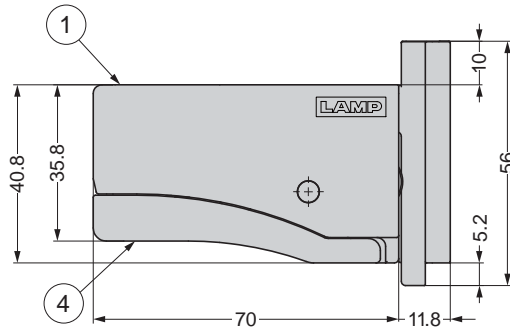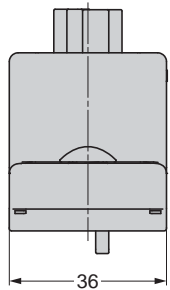

取付手順 INSTALLATION

【1】レバー③を押しながら、本体をアルミフレームの溝に挿入。

While pressing the lever③, insert the body into the aluminum frame.




【2】ガイドピースを溝に挿入。

Insert guide piece into the groove.

【3】六角穴付ボルトで固定。

Fix guide piece with screw.

△アルミフレームの端から挿入する場合は、ガイドピースが付いたまま、レバー③を押して挿入。
△When inserting from the end of the aluminum frame, insert the body without removing the guide piece ③.

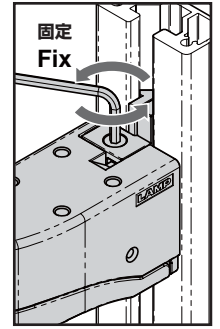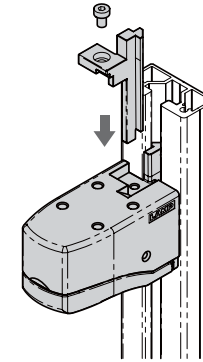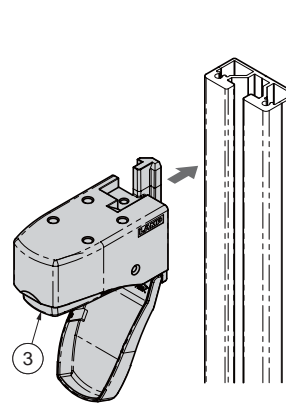

操作方法 HOW TO OPERATE

【1】カバー④を開ける。
Open the cover④.

【2】レバー③を押しながら本体を動かし、保持したい位置でレバーから手を離す。

While pushing the lever③ move the body, then release the lever at the position to be held.

